


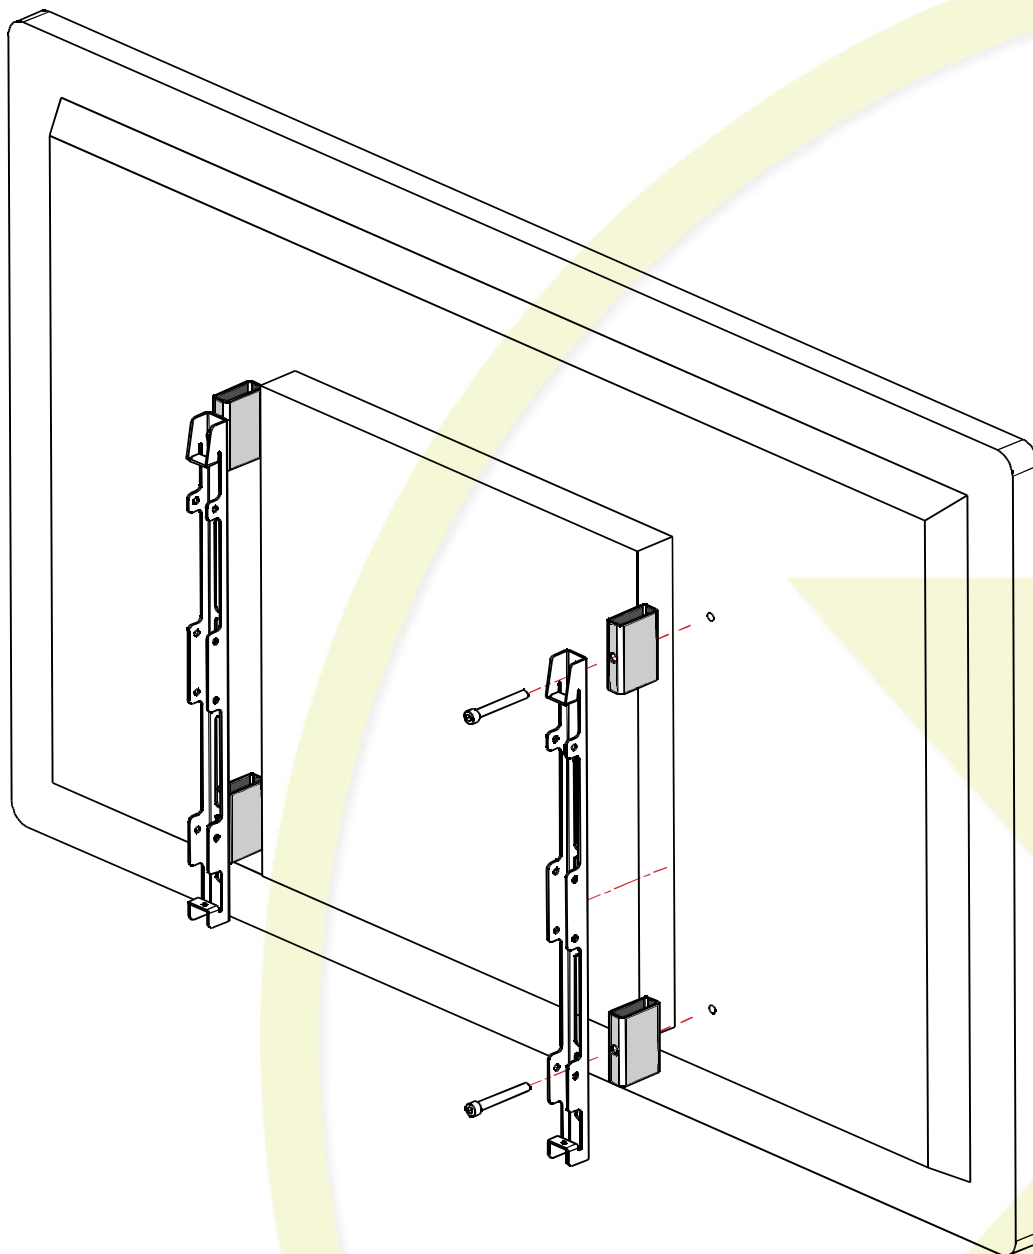

Installation manual

Part nr. 902847-01


VESA Bracket Spacer Set 50mm

For the BalanceBox®400


Safety Instructions



Tools needed

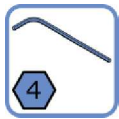

The contents of the box

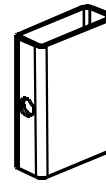

A
4x





B
4x
M8x65




C
4x
M6x65

1

Mount spacers with VESA upright brackets to flatpanel as shown, use M6 or M8 bolts B or C according to flatpanel specifications

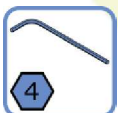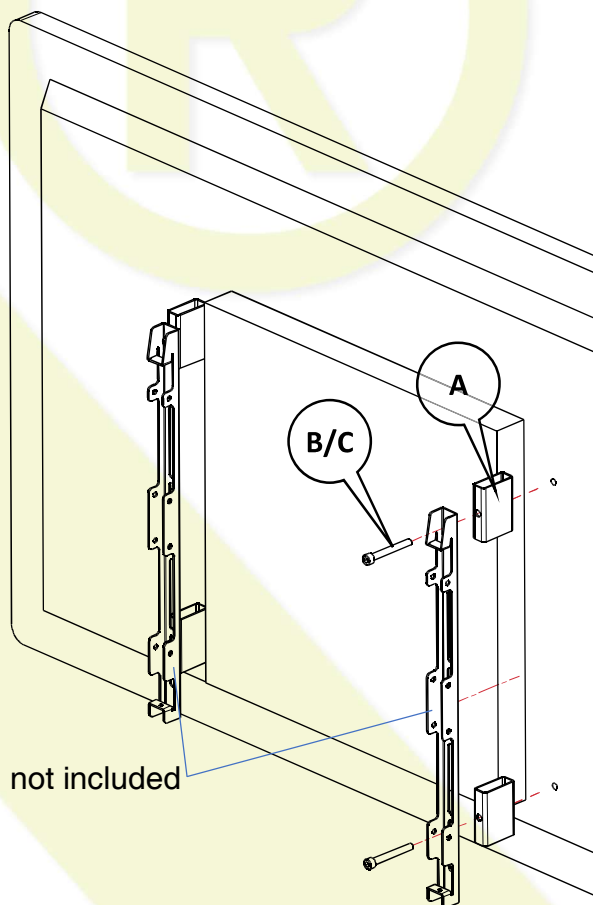


OR

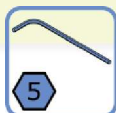


2

Use spacers to clear raised area between VESA mounting points. Max. height of raised area 60 mm total.

Side section view

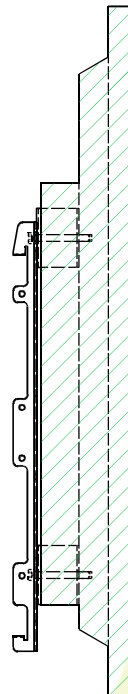

Top view

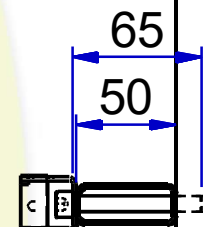

60 max

CAUTION!:

Bolts will need 15 mm deep thread into Flat panel mounting holes, check flat panel specifications to avoid damage